 


Manual



24/192 AD Converter Model 1090

Version 1.0 - 1/2011

Designer: Jens Gronwald, Mario Michel

This manual contains a description of the product. It in no way represents a guarantee of particular characteristics or results of use. The information in this document has been carefully compiled and verified and, unless otherwise stated or agreed upon, correctly describes the product at the time of packaging with this document.

Sound Performance Lab (SPL) continuously strives to improve its products and reserves the right to modify the product described in this manual at any time without prior notice. This document is the property of SPL and may not be copied or reproduced in any manner, in part or fully, without prior authorization by SPL.

SPL electronics GmbH Sohlweg 80 41372 Niederkruechten Germany Tel. +49 (0)2163 983 40 Fax +49 (0)2163 983 420

Email: info@spl.info
Website: spl.info

© 2011 SPL electronics GmbH. All rights reserved. Names of other companies and their products are trademarks of their respective owners.



Content

Safety instructions	4
Product features	4
Scope of delivery	5
Installation General Instructions, Adaptor plate Step-by-step	5 6
Connections & Operation SYNC INPUT, Sample Rate Double S/P-DIF output RCA and optical, Additional input with single-channel devices	8
Technical Specifications	10
Your Notes	11



Safety Instructions

- Please refer to the safety instructions in the manual of the unit in which you will be installing the converter.
- When installing the converter, carefully follow the instructions beginning on page 5. If you are uncertain, please ask a qualified technician or your SPL dealer for assistance.

Product Features

The Analog/Digital Converter Module 1090 is an optional digital output for compatible SPL units with a plug-and-play design for easy installation. It offers an S/P-DIF output with both coaxial and optical connectors in parallel.

The heart of the module is a 24-bit converter with a variable sample rate of up to 192 kHz. Highly accurate quartz oscillators ensure a clean, low-iitter master clock.

The internal sample rate can be switched between 44.1, 48, 88.2 and 96 kHz. Other sample rates (32, 176, 4 and 192 kHz are set by external syncronization.

The converter can be synced to other digital devices via a S/P-DIF input.

The internal oscillators are automatically disabled when an external clock signal is present to prevent interference.

An extremely effective voltage stabilizing circuit ensures that the converter continuously receives sufficient and stable voltage – an important prerequisite for clean, transparent audio.

The compact design of the input stage guarantees the shortest possible signal path to the converter. Overdimensioned grounding surfaces on both sides of the circuit board effectively reduce interference and ensure optimal separation between analog and digital components.



- AD Converter Module 1090
- Two each M3 screws, nuts and washers
- Adaptor plate
- Manual

General Instructions/Adaptor Plate

Installation

The AD Converter Module 1090 is designed strictly as an option for compatible SPL devices. If you are not a technician or do not have sufficient experience with electronic repairs or modifications, we highly recommend that you ask a technician or your SPL dealer for assistance.

- Before installing the module, discharge any static electricity by deactivating the ground lift switch on the rear panel of the respective SPL device and touching the unit's casing.
- Disconnect the power cable as well as any other cables from the SPL unit.
- Handle the converter module with care, avoiding contact with the components. Hold the module by the panel or the edges of the circuit board only. Avoid any force or pressure when connecting the module to the device.

Adaptor Plate


In some cases the module must be attached to the adaptor plate using the included M₃ screws, washers and nuts before it can be mounted in the rear-panel option slot on an SPL device.






Installation

Step 1: Place the converter module on the top of the device as illustrated. Remove the screws and then the cover of the option slot on the device's rear panel.

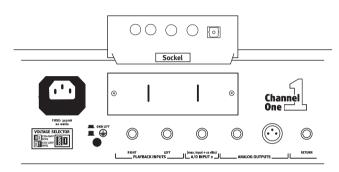


Step 2: Remove the strap holding the cable from the inside of the slot cover. You may have to (carefully) cut through the silicone drop.

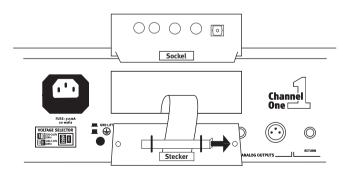




Step 3: Carefully and without twisting it, plug the cable from the device into the slot on the converter module. The plug only fits in one way into the slot.

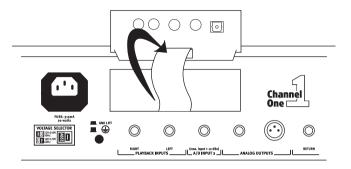

Step 4: Without turning it, insert the module into the device (circuit board upwards) and fasten it using the screws from the optional slot cover.

 Your new converter module is now ready for operation.



Connections & Operation

SYNC INPUT

The SYNC input allows you to feed an external signal into the converter to control the sample rate. Please note that it is not an audio signal input – an AD converter cannot be used for DA conversions.

Connect an S/P-DIF output from your master source (sound card, interface) to the SYNC INPUT. The sync signal is always present, also if no audio signal is present at the S/P-DIF output.

The 1090 is not equipped to accept Word Clock for synchronization.

If a valid signal is present, the converter automatically conforms to the sample rate received at the SYNC input. A yellow LED illuminates to display a valid sync signal. The internal oscillators are automatically disabled when an external clock signal is present to prevent interference.

If the sync signal is no longer present (e.g. in the case of a dropout), the converter automatically reverts to the sample rate that was previously selected.

Sample Rate Selection

The AD Converter Module 1090 allows you to select one of the following internal sample rates: 44.1, 48, 88.2 and 96 kHz.

The "44.1/48" button serves to chosse between 44.1 and 48 kHz (not actuated: 44.1 kHz; actuated: 48 kHz). The "x2" button doubles one of the sample rates that were selected with the "44.1/48" button – this way you can select 88.2 or 96 kHz respectively.

Other sample rates (32, 176,4 and 192 kHz) can only be used via external sync signals (see above, SYNC INPUT).



Double S/P-DIF output: RCA and optical

The converted signal is routed to both the RCA and optical output. Both outputs can be used simultaneously. The digital signal is transferred in professional S/P-DIF

The digital signal is transferred in professional S/P-DIF format. If the receiving device does not connect properly with the AD converter module 1090, check if the receiving device supports professional format (some consumer units for example do not).

Additional input with single-channel devices

If the AD Converter Module 1090 is installed in a singlechannel SPL device such as the GainStation 1, Frontliner, Channel One or Track One, the second channel of the stereo converter can be used via the additional analog AD converter input on the device's rear panel. This allows you to route two preamps or channel strips through one converter, or route any other single-channel analog signal to the converter's second channel. For additional information please see the manual for the SPL device you are upgrading.



Technical Specifications

Internal sample rates: 44.1, 48, 88.2, 96 kHz

External sample rates: 32 kHz, 176,4 kHz and 192 kHz

Dynamic range: 112 dB (A-weighted)

THD+N (@-1 dBFS/1 kHz): 0,0007%

Frequency response (48 kHz): 10 Hz-22kHz, ±0.2 dB

Jitter (average; 700 Hz-100 kHz): <300 ps

Stop band attenuation: -105 dB @48 kHz; -102 dB @96 kHz

0 dBFS: = +15 dBu

Power consumption +15 V: max. 115 mA

Power consumption -15 V: max. 17 mA

Dimensions (W x H x D): 100 x 27 x 76 mm

(3.94 x 1.06 x 3 in.)

Weight: 68 g (2.39 oz.)



